



CAN-AMERICAN CORRUGATING CO. LTD.
MARGARET, MB

Pipe Flashing Installation Instructions

Step 1: Select a pipe flashing size that is approximately 20% less than the diameter of the pipe. You may have to trim the flashing slightly at the top.



CAUTION: It is important not to trim too much as there must be a tight fit between the flashing and the pipe.

Step 2: Pull the flashing down around the pipe.




TIP: A small amount of non-petroleum lubricant around the opening of the flashing will lubricate the flashing, making it easier to slide down in place.



Step 3: Press the metal flange on the base of the flashing down to form it into the metal profile.



Step 4: Between the flashing base and the metal roof sheet apply silicone.

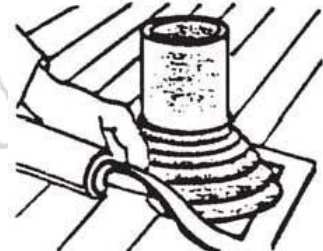

Step 5: Complete the flashing installation by fastening the metal flange down with fasteners at a spacing of 1 1/2".

